

## INSTRUCTIONS FOR INSTALLING DROP SIDE OF NURSERYWORKS CRIB

---

- 1 Please ensure that all screws are properly tightened on crib. However, the screws H1, which screw the mattress support bar into the end of the crib, need to be loosened about 75% - so that they are still in – but loose. This is so the slat can be properly inserted into the track.
- 2 In order to ensure that you are putting on the drop-side properly, please review the following:


To determine which side of the dropside is top and which is bottom:  
When leaning the dropside against the crib, you will see that there are two separate tracks on each side of the dropside, a lower and an upper track.

The lower track is the one that has a curve at the bottom that looks like a hook or a “J”. This J must be at the bottom – and upright as “J”.

To determine which side of the dropside is front and which is back:  
If you again lean the dropside against the crib, and then face the crib from the left side, you will be looking at the J at the bottom of the drop-side. The hook at the bottom, on the bottom of the track, will look like a proper “J.”

If you are facing crib from the right side it looks like a backwards “J.”  
Another way to determine front and back is to look inside the J, and you will see a piece of black metal. This piece of metal is in front on the stem, or long part of the “J” when you are facing the dropside from either side of crib.

- 3 Now that you have the dropside properly positioned, and the H1 screws loosened, hold up the dropside against the ends of the crib.  
Start with the left side, meaning the left as you are facing the crib.  
Confirm that the F screw is tight enough by twisting it.  
Insert the bottom piece of hardware on the inside of the side slat of the crib into the hook, or “J” on the bottom track of the device on the drop-side. It should go into the the small curved part of the J.

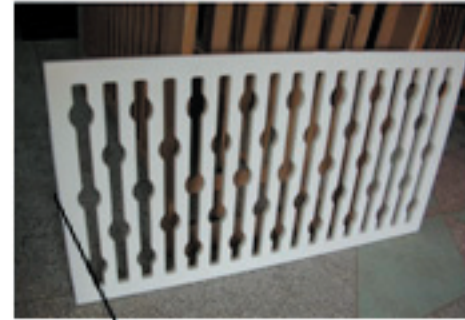

**When installing the dropside, please make sure the metal lever is on the outside.**

## INSTRUCTIONS FOR INSTALLING DROP SIDE OF NURSERYWORKS CRIB

---

Raise the slat STRAIGHT UP, approx 1/2 inch, so that it completely catches inside the track and inside the J.

Then push the side rail of the crib out slightly so you can continue to see that the bottom track is connected, and carefully insert the F screw which is affixed on the inside of the slat, into the big opening on the top track (the directions refer to this as the N hole in the drop-side mechanism).

Release the side slat so that you are not longer pushing it out and can no longer see inside the track.

Then slowly lower the side into the track into position, releasing the side of the crib.

- 4 Moving to the right side of the crib, please push in the pin that the instructions call G to make sure it works. It should be easy to press in, and it should pop right back to its original position.

Then push the side rail on the right side of the crib out just slightly so that you can repeat the same method as above:

If the pin does not readily pop out, please push it several times, it may just need to loosen up.

- 5 Now that the dropside is firmly in its track – go back and tighten the H1 screws on each side. This is critical.

To use the dropside, grab dropside with both hands on either the 3rd or 4th slat from the end – so that your hands are even. Push bottom of the slat in with lower leg, which will allow you to lift the side up, pull it towards you, and then lower.